


1. Remove the plug cover (1) by removing the two screws (2).
2. Clean any dirt from around the spark plug bases.  
Remove the spark plugs using the spark plug wrench furnished in the tool kit.

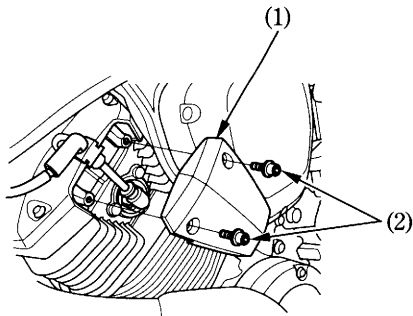

- (1) Plug cover
- (2) Screws