



FEATURES (Not required for operation)


STEERING LOCK

The steering can be locked when the ignition switch (1) is in the "LOCK" position.

To lock the steering, turn the handlebars all the way to the left or right, turn the ignition key (2) to LOCK while pushing in. Remove the key.

To unlock the steering, turn the key to OFF while pushing in.

Do not turn the key to LOCK while riding the scooter; loss of vehicle control will result.

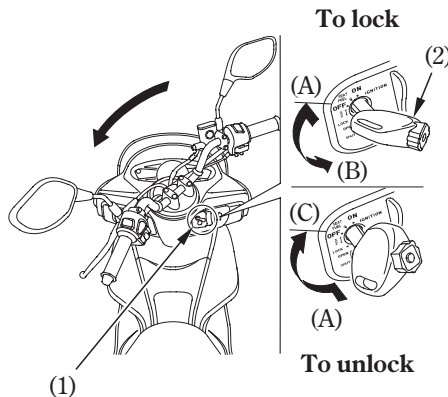

- (1) Ignition switch
- (2) Ignition key

- (A) Push in
- (B) Turn to LOCK
- (C) Turn to OFF

