



Restart the Engine

- Check the **STAND BY** indicator. If it is not flashing, you can't restart the engine with the Idling Stop system, even if you open the throttle.
- If you get off the scooter (without sitting) while the engine is stopping by the Idling Stop system, the **STAND BY** indicator will go out, and for about 3 minutes later, the Idling Stop system will be cancelled and headlight will go out.
- If you lower the side stand, Idling Stop system will be cancelled.

To start the engine with the **STAND BY** indicator off, see starting procedure (page 68) for standard engine starting.

NOTICE

Headlights stay on after the engine is stopped by the Idling Stop system. The battery may discharge and you may not be able to restart engine.

When the battery is weak, switch the Idling Stop switch to the "**IDLING**" and do not to use the Idling Stop system. See your Honda dealer to check the battery.

See your Honda dealer for checking the battery as specified in the maintenance schedule (page 90).

