


SIDE STAND

(Refer to the maintenance precautions on page 59).

Check the rubber pad for deterioration and wear. Replace if wear extends to the wear line (See (1) in the picture). Check the side stand assembly for freedom of movement. If parts must be replaced, please contact your HONDA dealer.

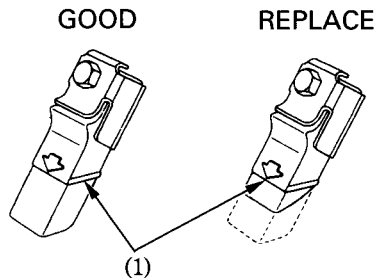

Replace if wear extends to any point of the wear line.

(1) Wear line