


Installation Notes:

- To install the rear wheel, reverse the removal procedure.
- Make sure that the lug (5) on the swingarm is located in the slot (6) in the brake panel (7).
- Torque the following bolts:

Axle nut torque:

95 N·m (9.5 kg·m, 69 ft·lb)

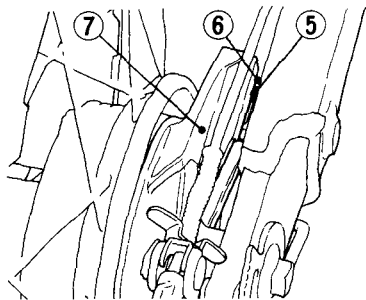


(5) Lug (6) Slot (7) Brake panel

- Position the brake arm pin holder (8) correctly.
- Adjust the rear brake (page 24) and drive chain (page 67)
- Apply the brake several times and check for free wheel rotation when released.

⚠ WARNING

- * If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.

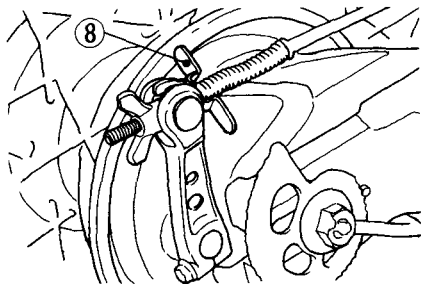

(8) Brake arm pin holder