




Wheels

Installation

RIGHT FRONT

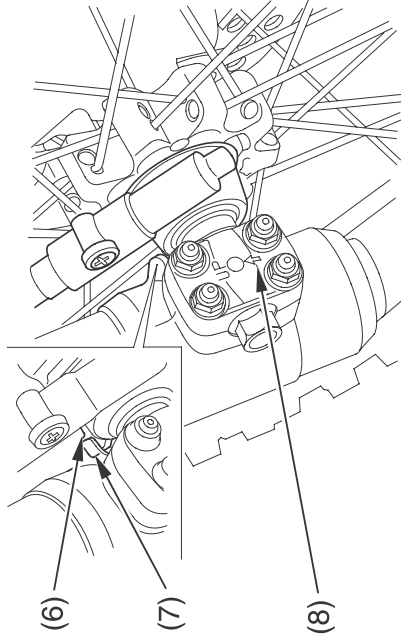

- (6) tang
- (7) tang
- (8) UP mark

1. Reverse the removal procedure. Insert the axle through the wheel hub and left fork leg. Make sure the tang (6) on the tripmeter gearbox is located behind the tang (7) on the right fork leg.

- 2. Torque the axle to:
65 lbf-ft (88 N·m , 9.0 kgf·m)
- 3. Install the axle holder with the UP mark (8) upward and first tighten the upper holder nuts to the specified torque, then tighten the lower axle nuts to the same torque:
9 lbf-ft (12 N·m , 1.2 kgf·m)
- 4. After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely. Check front brake adjustment (page 107).

If a torque wrench was not used to install the wheel, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

