


Wheels

Installation

RIGHT REAR

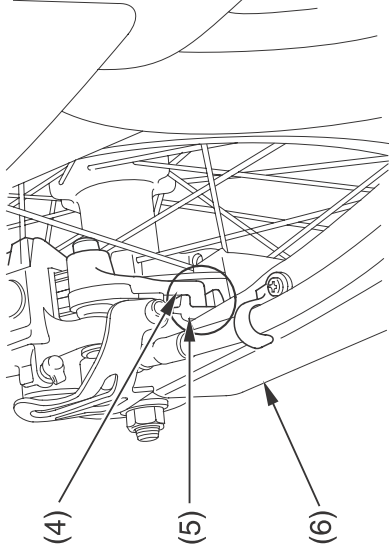

- (4) lug
- (5) slot
- (6) swingarm

1. Reverse the removal procedure. Make sure the lug (4) on the brake caliper is located in the slot (5) in the swing arm (6). Check that the chain adjusters are installed properly.

- 2. Torque the axle nut to:
65 lbf-ft (88 N·m , 9.0 kgf·m)
- 3. Adjust the drive chain (page 126).
- 4. Apply the rear brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.

If a torque wrench was not used to install the wheel, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

