




DRIVE CHAIN

INSPECTION

Shift the transmission into neutral.

Measure the drive chain slack midway between the sprockets.

CHAIN SLACK: 10–20mm (3/8–3/4 in)

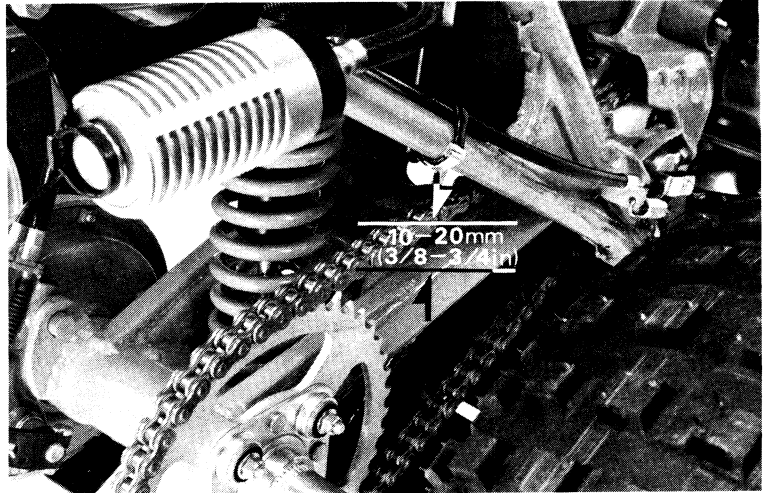

DRIVE CHAIN ADJUSTMENT

To adjust the drive chain, remove the cotter pin from the swing arm pivot bolt, and loosen the pivot bolt nut.

Loosen the drive chain adjuster lock nuts and turn the adjusting bolts.

CAUTION:

Be sure that the index mark aligns with the same reference marks on the scale on both sides. Tighten the pivot nut and install a new cotter pin.

TORQUE: 70–110 N·m (7.0–11.0 kg-m,
51–80 ft-lb)

Retighten both lock nuts.

WARNING


Check the rear brake pedal play after the drive chain tension has been adjusted.

When the drive chain becomes extremely dirty, it should be removed and cleaned prior to lubrication.

Remove the drive sprocket cover.

Remove the drive chain.

LOCK NUT ADJUSTER SCALE

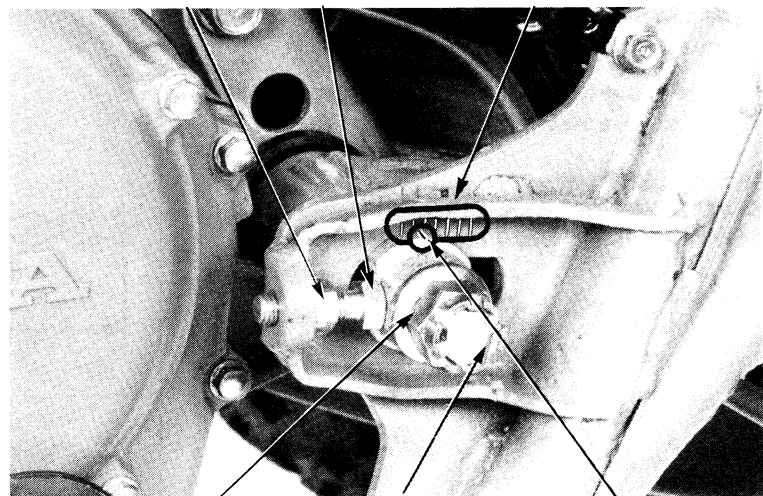

PIVOT BOLT NUT COTTER PIN INDEX MARK

COVER

