




STEERING HEAD BEARINGS

NOTE

Make sure the cables do not interfere with the rotation of the handlebar.

Raise the front wheel off the ground and make sure that the handlebar rotates freely.

If the handlebar moves unevenly, binds or has vertical play adjust the steering head bearing by turning the steering head adjusting nut with a pin spanner (Page 10-31).

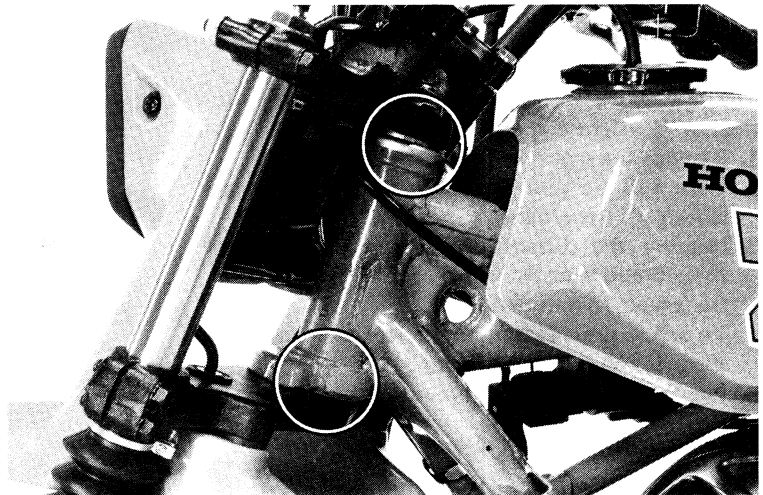

SUSPENSION

FRONT SUSPENSION

Check the action of the front forks by compressing them several times.

Check the entire fork assembly for signs of leaks or damage.

Replace damaged components which cannot be repaired.

NOTE

Do not repair bent fork tubes. They must be replaced.

Tighten all nuts and bolts to the specified torque values.


Raise the front of the vehicle so that there is no weight on the front wheel.

Check air pressure in each fork tube (Page 10-25)

AIR PRESSURE: 10–50 kPa (0.1–0.5 kg/cm²,
1.4–7.0 psi)



AIR VALVE CAPS

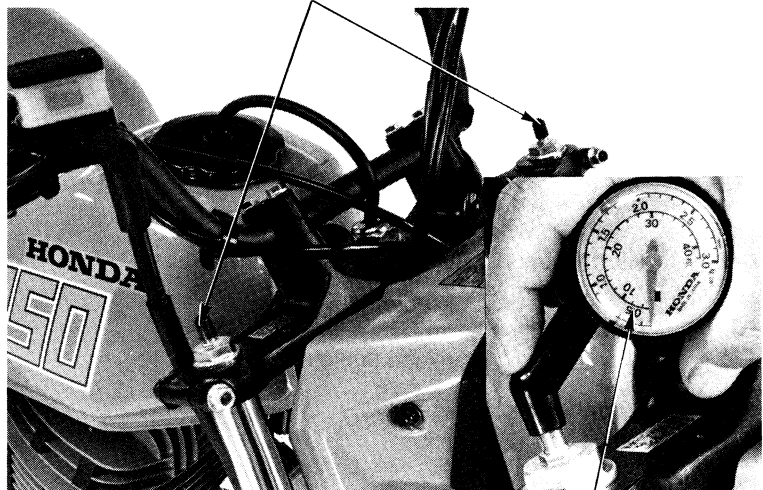

PRESSURE GAUGE