




CYLINDER HEAD

REMOVAL

Remove the seat/rear fender and fuel tank.
Remove the two exhaust pipe springs.



Loosen the two exhaust muffler 8 mm flange bolts.
Remove the exhaust muffler spring.

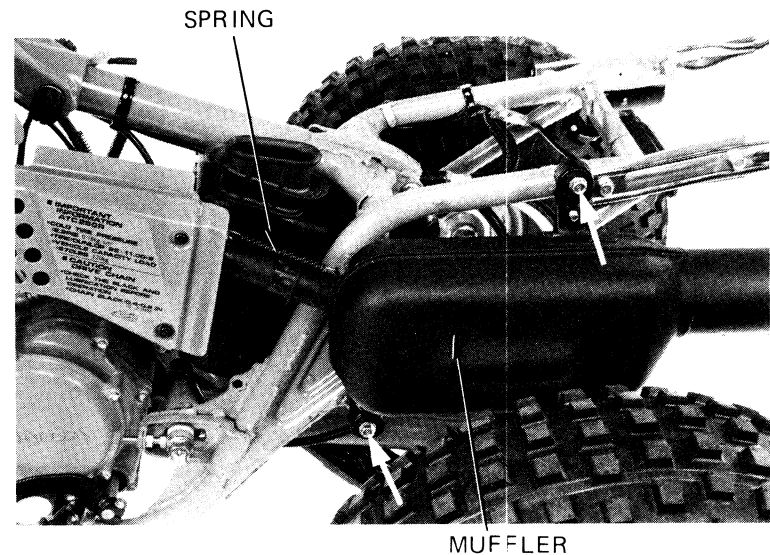

Remove the two exhaust chamber 8 mm flange bolts and remove the chamber.

