




## AC GENERATOR REMOVAL

Remove the three flange bolts and remove the generator cover guard and cover.


GENERATOR COVER

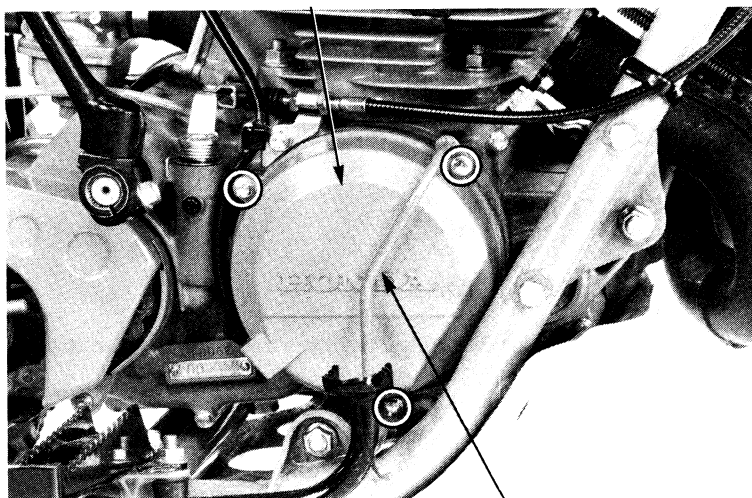

COVER GUARD

Remove the 12 mm nut attaching the flywheel.

UNIVERSAL HOLDER 07725-0030000

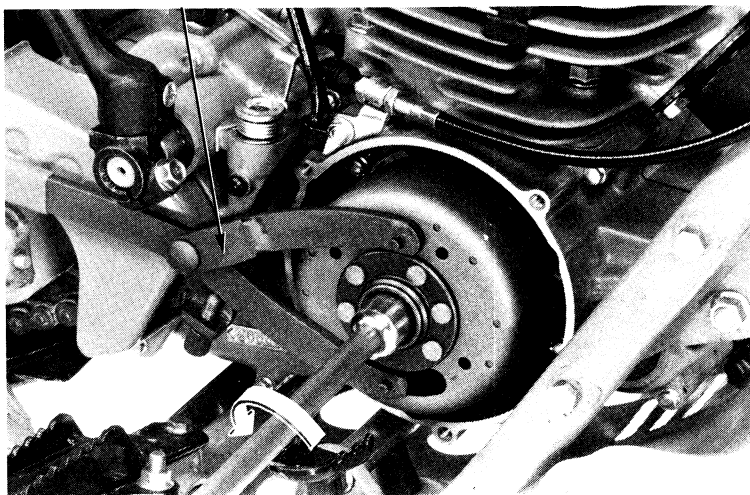

FLYWHEEL PULLER 07733-0010000 or  
07933-0010000

Remove the flywheel and woodruff key from the crankshaft.

