




## SHIFT LINKAGE

### REMOVAL

Remove the engine (Section 4).  
Remove the clutch cover (Page 7-2).




Remove the left crankcase cover bolts.

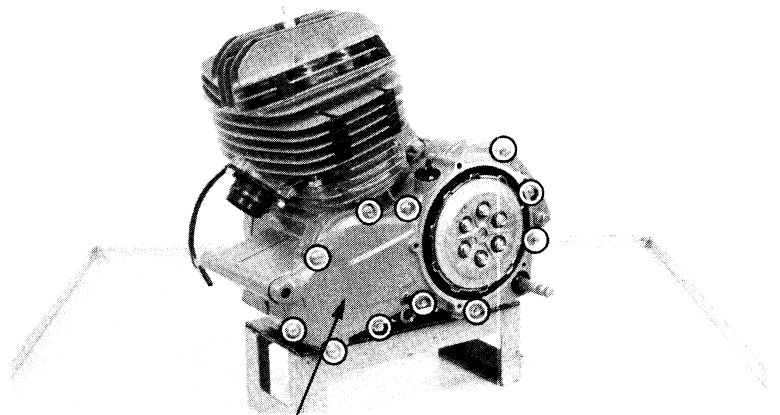

LEFT CRANKCASE COVER

Remove the clutch (Page 7-2).

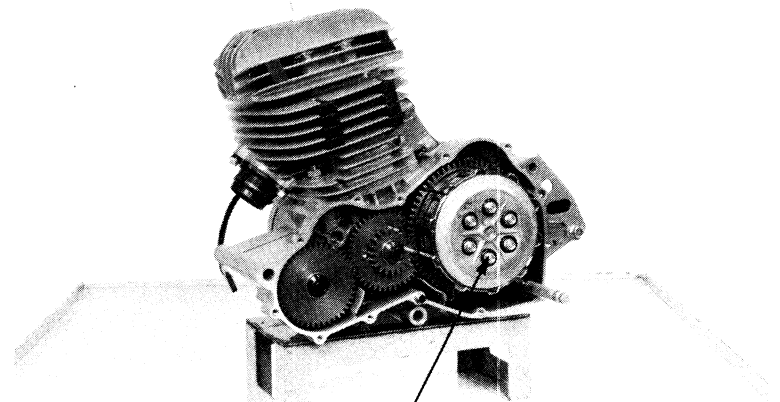

CLUTCH