




Operate the brake lever to force the piston out from the cylinder.

NOTE

- Place an oil pan under the caliper to receive drained brake fluid.
- Avoid spilling brake fluid on painted surfaces, plastic lenses or rubber parts.

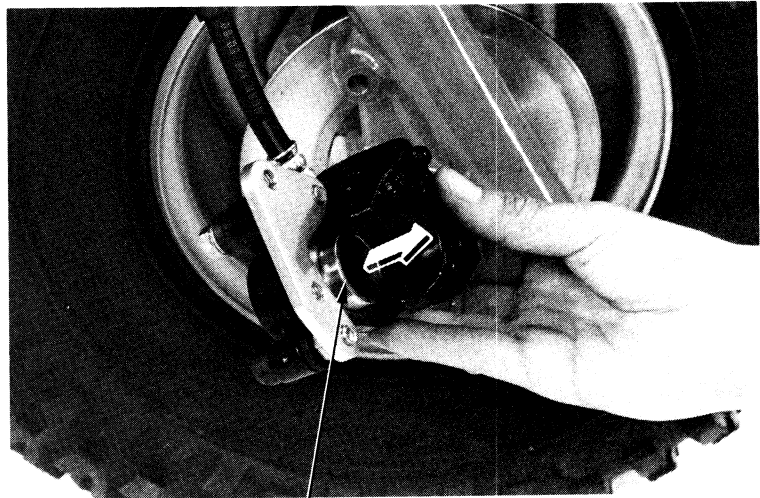

CALIPER PISTON


Disconnect the brake hose from the caliper.

If the piston is stuck in the caliper, do the following steps.

Place a shop towel or rag over the piston to prevent the piston and brake fluid from coming out, and apply a small amount of air pressure to the fluid inlet.

WARNING

Do not use high pressure air or bring the nozzle too close to the inlet.

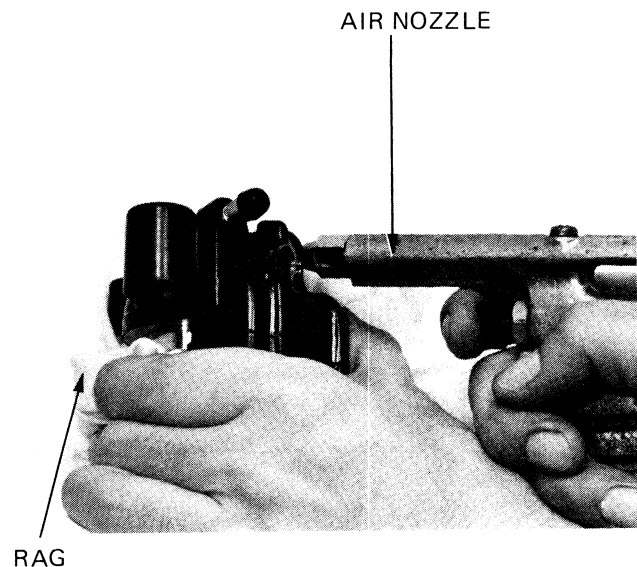

Remove the piston seal and metal stopper from the caliper cylinder.

Clean the caliper grooves with brake fluid.
Replace the piston seal and metal stopper with new ones.

CAUTION:

Do not use solvent for cleaning. Solvent can cause deterioration of rubber parts.

