




REAR WHEEL

REMOVAL

Raise the rear wheels off the ground with a jack or block under the engine.

Remove the rear wheel nuts.

Remove the rear wheels.

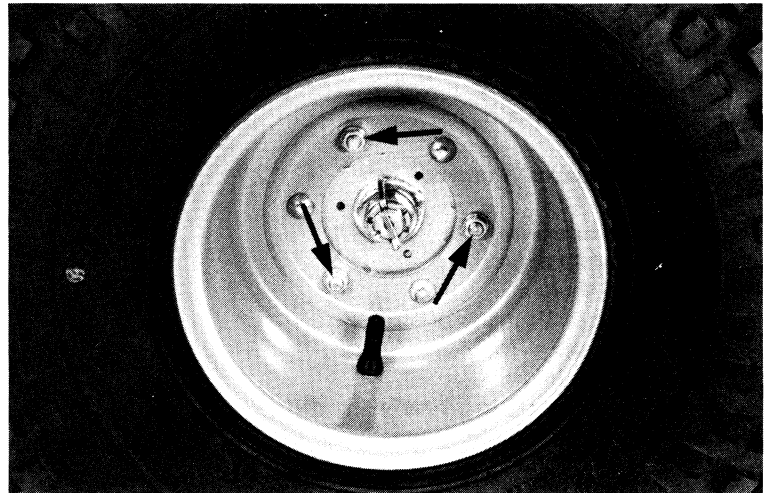


REAR TIRE DISASSEMBLY/ASSEMBLY

For tire disassembly, assembly and repair, refer to pages 10-12 to 10-15

NOTE

The rear tire has one rim plate on the inner rim.

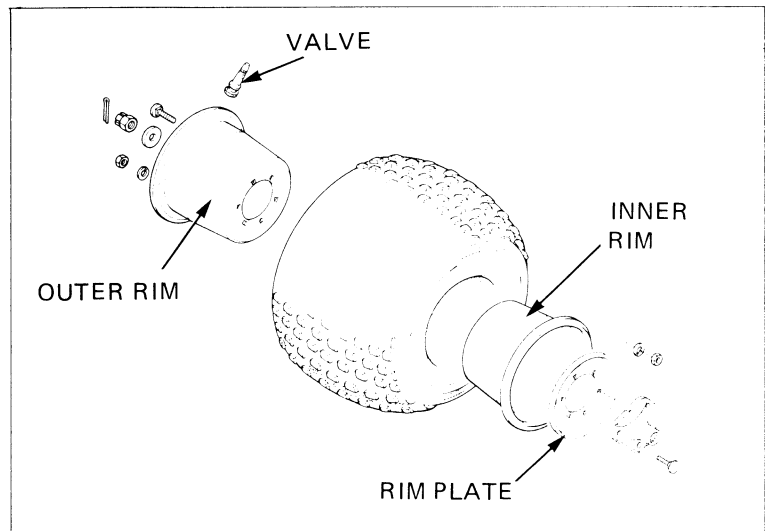

INSTALLATION

Install each rear wheel with the tire valve facing out.

Tighten the wheel nuts.

TORQUE: 18-25 N-m (1.8-2.5 kg-m,
13-18 ft-lb)

