

EXHAUST SYSTEM

REMOVAL

WARNING

Do not service the exhaust pipe or muffler while they are hot.

- Remove the rear fender.
- Remove the exhaust chamber/muffler springs.
- Remove the exhaust chamber/muffler bolts.
- Remove the protectors.

NOTE

Check the gasket and pipe seal for wear.
Replace with a new parts as necessary .

INSTALLATION

The installation sequence is essentially the reverse of removal.

NOTE

After installing, make sure that there are no exhaust leaks.

