

Changing/Cleaning Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

NOTICE

Using the wrong air cleaner element can result in serious damage to the engine.

1. Remove the right side cover. [▶ P. 54](#)
2. Remove the attaching screws and air cleaner housing cover.
3. Pull out the air cleaner element and check it for any damage.
 - ▶ Blow away the remaining dust by applying compressed air from the outside of the air cleaner element.
 - ▶ Replace the air cleaner element if it is excessively dirty, torn or damaged.

