

4. Thoroughly clean the inside of the air cleaner housing.
  5. Install the air cleaner element.
  6. Install the parts in the reverse order of removal.
-