

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 81	Burned-out Light Bulb .....	P. 93
<b>Overheating (High oil temperature indicator is on)</b> .....	P. 82	Blown Fuse .....	P. 97
<b>Warning Indicators on or Flashing</b> .....	P. 83		
Low Oil Pressure Indicator.....	P. 83		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL) .....	P. 83		
ABS (Anti-lock Brake System) Indicator			
(CB1100A only) .....	P. 84		
<b>Tire Puncture</b> .....	P. 85		
<b>Electrical Trouble</b> .....	P. 93		
Battery Goes Dead.....	P. 93		