

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 222).

To protect the catalytic converter in your motorcycle's exhaust system, avoid extended idling and the use of leaded gasoline.

Safe Riding Precautions	54
Starting & Stopping the Engine	55
Preparation.....	56
Starting Procedure	57
Flooded Engine	58
Bank Angle Sensor Ignition Cut-off System	58
How to Stop the Engine	59
Shifting Gears.....	60
Braking	62
(CB1000R ABS)	
Anti-lock Brake System (ABS)	65
(CB1000R ABS)	
Anti-lock Brake System (ABS)	
Indicator.....	66
Parking	67
Theft-prevention Tips	70
Riding with a Passenger or Cargo.....	72