


1. Turn the adjuster dial (1) while pushing the clutch lever (2) forward.
2. Align the index mark (3) on the clutch lever with the numbers (4) on the adjuster dial.
3. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your motorcycle should move smoothly and accelerate gradually.

Fluid Level Inspection

Refer to *Safety Precautions* on page 78 .

LEFT HANDLEBAR

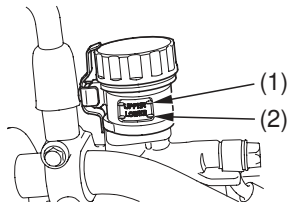

- (1) UPPER level mark
- (2) LOWER level mark

Check that the fluid level is between the UPPER (1) and LOWER (2) level marks. If the fluid level is below the LOWER level mark, it indicates fluid leakage. See your dealer for repair.