


## If You Have a Flat Tire

- Loosen the right and left axle pinch bolt (3) and remove the front axle bolt (4).
- Remove the front axle shaft (5), wheel and side collars.


### RIGHT FRONT

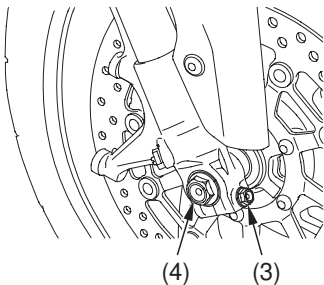

- (3) axle pinch bolt  
(4) front axle bolt

- Avoid pressing the brake lever when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your dealer for this service.

### LEFT FRONT

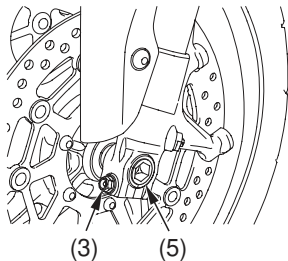

- (3) axle pinch bolt  
(5) front axle bolt