


## Fuel Tank Cover Assembly

### Removal

1. Remove the front seat. ► P. 76
2. Remove the bolts A.

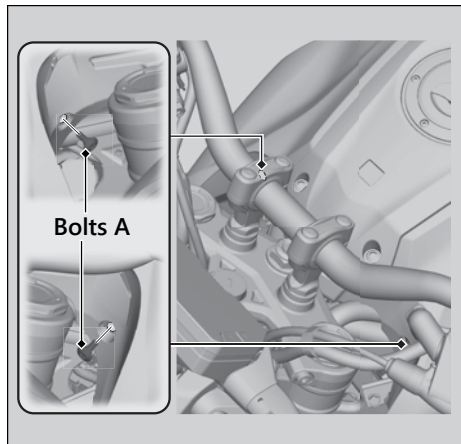

3. Remove the bolts B, bolts C, collars, bolt D and washer.

