


4. Remove the prongs from the grommets and release the slots from the tabs.
5. Carefully widen the both ends of the fuel tank cover assembly and remove it.
 - Be careful not to apply weight to the fuel tank cover assembly.

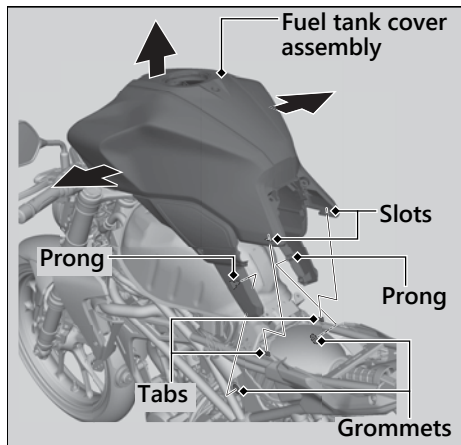

Installation

1. Install the fuel tank cover assembly in the reverse order of removal.
2. Tighten the bolts C and bolt D securely.

Torque: 7 lbf·ft (10 N·m, 1.0 kgf·m)

3. Tighten the bolts A and bolts B securely.

Torque: 3.1 lbf·ft (4.2 N·m, 0.4 kgf·m)

4. Install the front and rear seat. ► P. 76