- 5. Remove the rear axle shaft, side collars, axle washer and rear wheel.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
  - Do not push the brake pedal while the brake caliper is removed.

## Installation

- **1.** Attach the right and left side collars in their original locations on the wheel.
- **2.** To install the rear wheel, reverse the removal procedure.
  - Take care to prevent the brake caliper from scratching the wheel during installation.

## NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.