

Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ▣ P. 63

▮ Fuse Box Fuses

1. Remove the left shroud. ▣ P. 82
2. Pull out the fuse boxes from the battery case.
3. Open the fuse box covers.
4. Pull out the fuses one by one with the fuse puller and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
5. Close the fuse box covers.
6. Reinstall parts in the reverse order of removal.

CB300RA

