

<b>Engine</b>	
Number .....	114
Oil.....	51, 63
Oil Filter .....	65
Overheats .....	88
Starting.....	34
Stop Switch.....	32, 34, 108
Stopping .....	108
<b>Environment.....</b>	<b>113</b>
<b>Equipment</b>	
Owner's Manual .....	38
Tool Kit.....	38
<b>F</b>	
<b>Flooded Engine.....</b>	<b>34</b>
<b>Fuel</b>	
Consumption Meter.....	20
Gauge.....	19
Mileage Meter .....	20
Oxygenated .....	121
Recommended .....	36
Remaining.....	19
Tank Capacity .....	36
<b>Fuses.....</b>	<b>50, 104</b>
<b>G</b>	
Gasohol .....	121
Gasoline .....	36
<b>H</b>	
Hazard Switch.....	32
Headlight Aim .....	83
Headlight Dimmer Switch.....	32
Helmet Holder .....	37
High Beam Indicator .....	31
High Coolant Temperature Indicator .....	30, 88
Honda Contacts.....	125
Horn Button.....	32
<b>I</b>	
Ignition Cut-off System	
Banking Sensor.....	108
Side Stand .....	72