

Troubleshooting

Engine Will Not Start	P. 84	Blown Fuse.....	P. 101
Overheating (High coolant temperature indicator is on)	P. 85		
Warning Indicators On or Flashing	P. 86		
Low Oil Pressure Indicator	P. 86		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 86		
ABS (Anti-lock Brake System) Indicator	P. 87		
Other Warning Indications	P. 88		
Fuel Gauge Failure Indication.....	P. 88		
Tire Puncture	P. 89		
Electrical Trouble	P. 97		
Battery Goes Dead.....	P. 97		
Burned-out Light Bulb.....	P. 97		