

If the ignition switch is turned to the OFF position or none of the **SET**, **▲**, **▼** buttons is pressed for about 30 seconds, the control is automatically switched from the setting mode to the ordinary display.

If the button is not pressed for about 30 seconds, items in the process of being set will be discarded and only items where settings have been finalised will be applied.

Only if the ignition switch is turned to the OFF position will items in the process of being set and those that are finalised be applied.

1 Clock setting:

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold the **SET** button and the **▼** (down) button, the hour digits start flashing.
- 3 Press the **▲** (up) button or the **▼** (down) button until the desired hour is displayed.
 - u Press and hold the **▲** (up) button or the **▼** (down) button to advance the hour fast.



- 4 Press the **SET** button. The minute digits start flashing.

