



Instruments *(Continued)*

5 Changing the fuel mileage meter unit:

- 1 Press the  (up) button or the  (down) button to select "L/100km" or "km/L".







- 2 Press the  button. The fuel mileage meter unit is set, and the display moves to the setting of subtraction trip.


6 Setting the subtraction trip:

- 1 The preset figure is displayed and the third digit will be flashing.



- 2 To set the third digit, press the  (up) button or the  (down) button until the desired figure appears.
 - u Press and hold the  (up) button or the  (down) button to advance the figure fast.



- 3 Press the  button. The second digit starts flashing.

