

Items	Frequency*1									Regular Replace	Refer to page	
	× 1,000 mi	0.6	4	8	12	16	20	24				
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4				
Fuel Line	🔧			I		I		I			-	
Throttle Operation	🔧			I		I		I			125	
Air Cleaner *2					R			R			94	
Crankcase Breather*3			C	C	C	C	C	C			126	
Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R										-
Valve Clearance	🔧					I					-	
Engine Oil			R		R		R		R	1 Year	106	
Engine Oil Filter			R				R				106	
Clutch Oil Filter*8			R				R				108	
Engine Idle Speed	🔧			I		I		I			-	
Radiator Coolant*7				I		I		I		3 Years	110	
Cooling System	🔧			I		I		I			-	
Secondary Air Supply System	🔧					I					-	
Evaporative Emission Control System*4	🔧					I					-	

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (2 P. 177).
- 🔧 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L : Lubricate
- R : Replace
- C : Clean