## Sear ABS (Anti-lock Brake System) OFF Indicator

- Comes on briefly when the ignition switch is turned to the ON position.
- Comes on when the ABS function on the rear wheel is turned off.

## (B) ABS (Anti-lock Brake System) indicator

- Comes on briefly when the ignition switch is turned to the ON position.
- Goes off when your speed reaches approximately 6 mph (10 km/h).

## If it comes on while riding: P.152