


# Riding mode

You can change the riding mode.  
The riding mode consists of the following parameters.

P: Engine output level

EB: Engine brake level

: Torque Control level

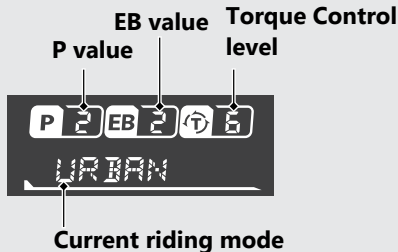

Riding mode has four modes.

Available riding mode: TOUR, URBAN, GRAVEL and USER.

## TOUR, URBAN and GRAVEL

- ▶ TOUR: Enables smooth acceleration even when riding with a passenger or a full load of luggage.
- ▶ URBAN: Standard, all-round mode for a variety of situations.
- ▶ GRAVEL: Good for stable riding on slippery surfaces such as dirt roads.

Each value of initial setting can not be changed.

## USER

Each value of initial setting can be changed.