



Spark Arrester ► Cleaning the Spark Arrester

- Remove the spark arrester mounting bolts, spark arresters and gasket from the muffler.

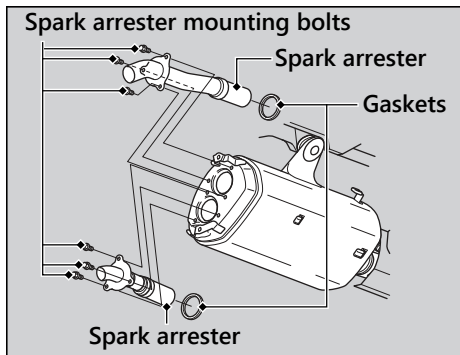

- Use a brush to remove carbon deposits from the spark arrester screen. Be careful to avoid damaging the spark arrester screen. The spark arrester must be free of breaks and holes. Replace, if necessary. Check the gasket. Replace, if necessary.

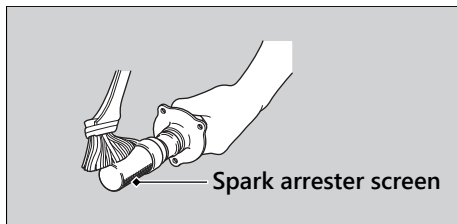

- Install the gasket and the spark arresters, and tighten the spark arrester mounting bolts.

Torque: 6.6 lbf-ft (9.0 N·m, 0.9 kgf·m)

- Install the muffler cover, grommets and tighten the pan screws.

Torque: 6.6 lbf-ft (9.0 N·m, 0.9 kgf·m)

- Install the collars, washers, tail cap and tighten the tail cap cover bolts.

Torque: 6.6 lbf-ft (9.0 N·m, 0.9 kgf·m)