


Cleaning the Crankcase Breather

1. Place a suitable container under the crankcase breather tubes.
2. Remove the crankcase breather tube plugs from the tubes.
3. Drain deposits into a suitable container.
4. Install the crankcase breather tube plugs.

Left

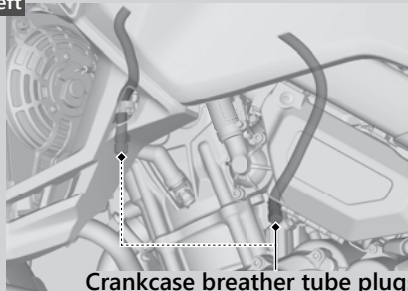

Right

