

# Maintenance Schedule

Items	Frequency	Whichever Comes First		Initial Maint.	Regular Maint. Interval					Refer to page:
		⇒	mi	100	600	1,200	1,800	2,400		
			km	150	1,000	2,000	3,000	4,000		
Note	Month	1	6	12	18	24				
*	Fuel Line					I		I	–	
**	Fuel Filter			R: every 4,800 mi (8,000 km)					–	
*	Throttle Operation					I		I	72	
	Air Cleaner	Note 1			C	C	C	C	67	
	Crankcase Breather				I	I	I	I	71	
	Spark Plug				I	I	I	I	77	
*	Valve Clearance			I	I	I	I	I	–	
	Engine Oil			R	R	R	R	R	61	
**	Engine Oil Strainer Screen					C		C	–	
**	Engine Oil Centrifugal Filter					C		C	–	
**	Engine Idle Speed			I	I	I	I	I	–	

\* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 162).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.