


Piston/Piston Rings/Piston Pin

Cylinder Head Removal


1. Clean the area above the engine before removal to prevent dirt falling into the engine.
2. Drain the radiator coolant after cooling the motorcycle ([page 42](#)).
3. Remove the seat and fuel tank ([pages 29, 30](#)).
4. Remove the carburetor ([page 112](#)).
5. Remove the exhaust pipe ([page 87](#)).
6. Remove the spark plug ([page 52](#)).
7. Remove the cylinder head cover ([page 53](#)).
8. Remove the camshaft holder assembly ([page 55](#)).
9. Remove the radiator grills (1)

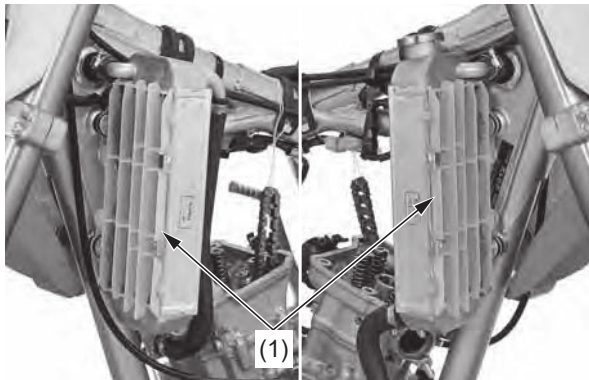

(1) radiator grills


10. Loosen the water hose clamp screws and disconnect the water hoses (2).
11. Disconnect the radiator overflow hose (3).

- Note the direction of the hose clamp.
- Be careful not to damage the radiator core.

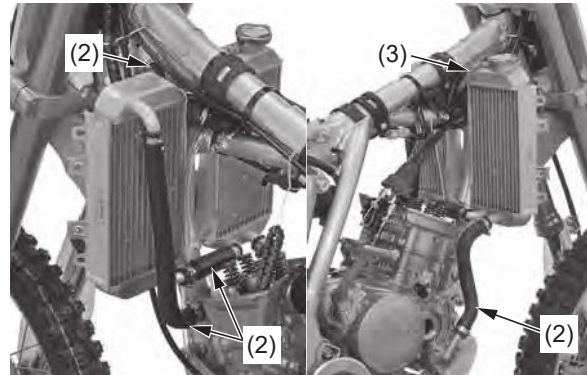

(2) water hoses
(3) radiator overflow hose

12. Remove the radiator mounting bolts/washers (4) and radiators (5).

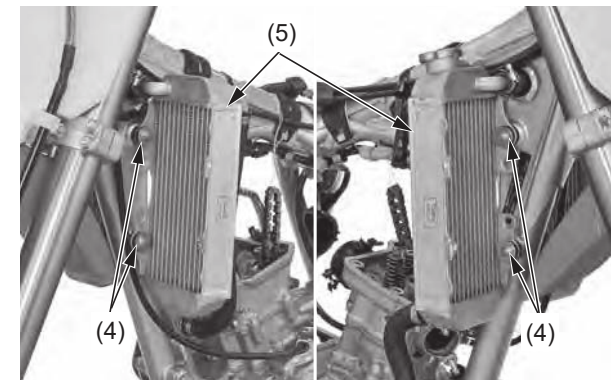

(4) radiator mounting bolts/washers
(5) radiators