## **Suspension Adjustment Guidelines**

	Symptom	Action
Stiff suspension	<ul> <li>Initial travel too stiff:</li> <li>Stiff on small bumps while riding at full throttle in a straight line.</li> <li>Stiff on small cornering bumps.</li> <li>Front end wanders while riding at full throttle in a straight line.</li> </ul>	<ul> <li>Test softer compression damping adjustments in 1/4 turn increments.</li> <li>Reduce the rebound damping adjustments in 1/4 turn increments.</li> <li>Check for dirt in the dust seals. Check the fork oil for any contamination. If the front end dives while cornering after the above adjustment: Reduce the rebound damping in 1/4 turn increments. If that doesn't solve the problem, install the optional stiff spring. If the stiff spring makes the suspension too stiff over the full range of travel: test softer compression damping adjustments in 1/4 turn increments until the desired compression damping for initial travel is obtained.</li> </ul>
	<ul> <li>Middle travel too stiff:</li> <li>Stiff on bumps when cornering.</li> <li>Front end wanders when cornering.</li> <li>Stiff suspension on bumps, especially downhill bumps.</li> <li>While braking, front end dives during initial travel, then feels stiff.</li> </ul>	<ul> <li>If initial travel isn't stiff:</li> <li>Test stiffer compression damping adjustments in 1/4 turn increments. (This should produce smooth fork action from initial to middle travel.)</li> <li>If initial and middle travel is stiff:</li> <li>Test softer compression damping adjustments in 1/4 turn increments.</li> <li>Reduce the rebound damping in 1/4 turn increments.</li> </ul>
	<ul> <li>Final travel too stiff:</li> <li>Doesn't bottom on landings, but feels stiff.</li> <li>Stiff on large bumps, especially downhill bumps.</li> <li>Stiff on large bumps when cornering.</li> </ul>	<ul> <li>If initial and middle travel aren't stiff:</li> <li>Test stiffer compression damping adjustments in 1/4 turn increments. (This should produce smooth fork action from initial to middle travel.)</li> <li>If final travel is still stiff after the above adjustment, or</li> <li>If initial and middle travel becomes stiff: <ul> <li>Install the optional soft spring.</li> <li>Test softer compression damping adjustments in 1/4 turn increments.</li> </ul> </li> <li>If the entire travel feels stiff after the above adjustments in 1/4 turn increments.</li> <li>If the entire travel feels stiff after the above adjustments in 1/4 turn increments.</li> <li>If the entire travel feels stiff after the above adjustments in 1/4 turn increments until the desired initial travel compression damping adjustments in 1/4 turn increments until the desired initial travel compression damping is obtained.</li> <li>Lower the oil level by 0.2 US oz (5 cm<sup>3</sup>).</li> </ul>
	Entire travel too stiff: • Stiff suspension on any type of terrain.	<ul> <li>Test softer compression damping adjustments in 1/4 turn increments.</li> <li>Reduce the rebound damping in 1/4 turn increments.</li> <li>Lower the oil capacity by 0.2 US oz (5 cm<sup>3</sup>).</li> </ul>