

## Suspension

6. With the fork tube held upright, measure the oil level (4) from the top of the tube.

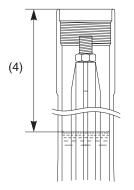

## (4) oil level


7. Adjust the oil level by adding or removing the oil with an after market syringe (5).

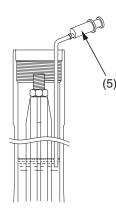


(5) syringe

## Fork Oil Level (CRF150R)

Standard 19.0 lbf/in (3.33 N/mm) Fork Spring

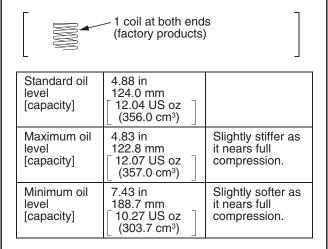

Optional Softer 17.9 Ibf/in (3.14 N/mm) Fork Spring

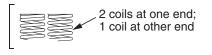

Standard oil level [capacity]	5.02 in 127.5 mm [ 11.95 US oz [ (353.2 cm <sup>3</sup> ) ]	
Maximum oil level [capacity]	5.02 in 127.5 mm [ 11.95 US oz [ (353.2 cm <sup>3</sup> ) ]	Slightly stiffer as it nears full compression.
Minimum oil level [capacity]	7.61 in 193.4 mm [ 10.14 US oz (299.9 cm <sup>3</sup> ) ]	Slightly softer as it nears full compression.

Optional Stiffer 20.2 Ibf/in (3.53 N/mm) Fork Spring

Standard oil level [capacity]	5.04 in 128.1 mm [ 11.93 US oz [ (352.7 cm <sup>3</sup> )	
Maximum oil level [capacity]	5.04 in 128.1 mm [ 11.93 US oz [ (352.7 cm <sup>3</sup> )	Slightly stiffer as it nears full compression.
Minimum oil level [capacity]	7.64 in 194.1 mm [ 10.13 US oz [ (299.4 cm <sup>3</sup> )	Slightly softer as it nears full compression.

(cont'd)