

Read this section carefully before you ride. It presents the location of the basic controls on your CRF.

Operation Component Locations .....6  
Indicator .....7  
MIL Blink Pattern.....7  
Current DTC/Freeze DTC .....7  
Circuit Inspection.....8  
DTC Index .....9