


Clutch System

Clutch Cover/Disc/Plate Removal


1. Drain the transmission oil ([page 53](#)).
2. Remove the clutch cover bolt A (1), clutch cover bolts B (2), and clutch cover (3).

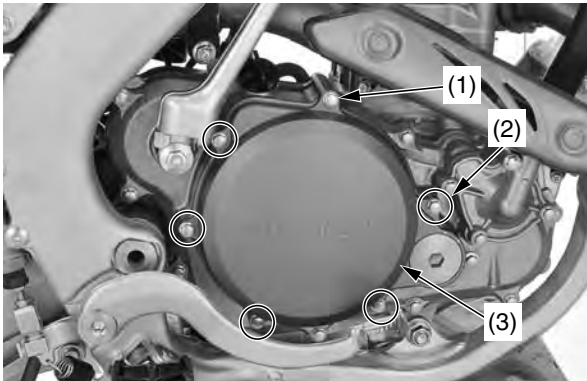

(1) clutch cover bolt A (3) clutch cover
(2) clutch cover bolts B


3. Remove the five clutch spring bolts and clutch springs (4).
Loosen the bolts in a crisscross pattern in two or three progressive steps.

4. Remove the clutch pressure plate (5).

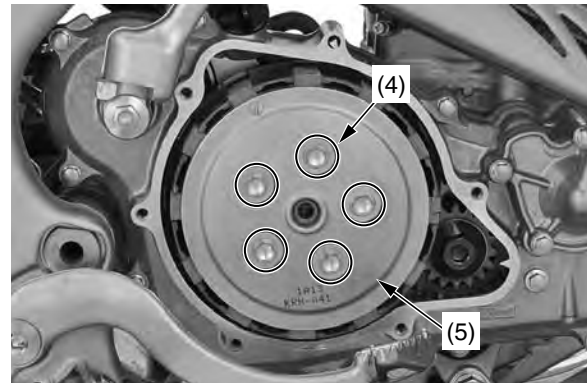

(4) clutch spring bolts/clutch springs
(5) clutch pressure plate

5. Remove the clutch lifter (6) and clutch lifter rod (7).
6. Turn the lifter bearing plate of the clutch lifter bearing with your finger. The bearing plate should turn smoothly and quietly. Discard the clutch lifter if the bearing plate does not turn smoothly.

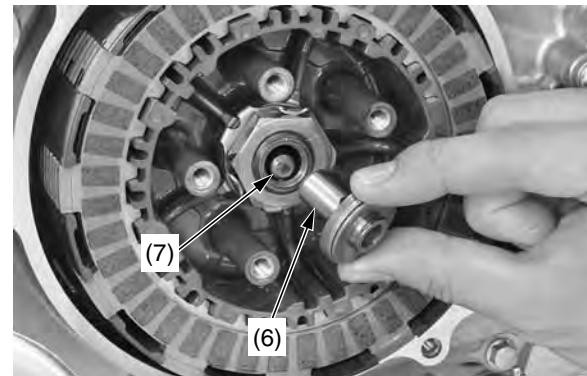

(6) clutch lifter
(7) clutch lifter rod

7. Remove the eight clutch discs, seven clutch plates, judder spring and spring seat (8).



(8) clutch discs, clutch plates, judder spring and spring seat