


- Suspend the front wheel above the ground and adjust the left fork air pressures.  
For details on left fork air pressures adjustment, refer to [page 122](#).

Left fork:

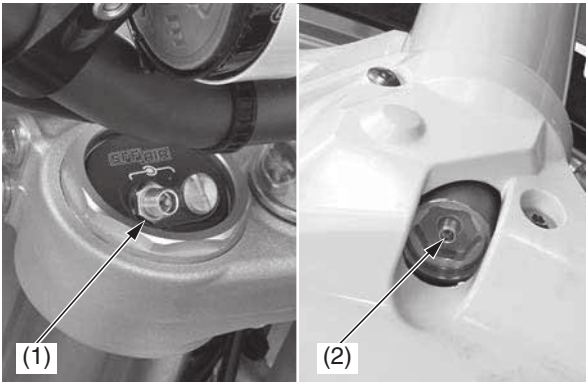

(1) inner chamber air valve  
(2) balance chamber air valve

When adjusting the left fork air pressure, adjust the inner chamber air pressure first, then adjust balance chamber air pressure.

When releasing the balance chamber air pressure, a small amount of fork oil spraying from the balance chamber air valve is normal. This will not affect the fork performance.

## Left Fork Air Pressure

	Inner chamber	Balance chamber
		psi (kPa, kgf/cm <sup>2</sup> )
minimum	131 (900, 9.2)	145 (1,000, 10.2)
standard	174 (1,200, 12.2)	163 (1,125, 11.5)
maximum	189 (1,300, 13.3)	189 (1,300, 13.3)

Do not adjust the left fork air pressure to less than the minimum calculated value or more than the maximum calculated value.

## Left Fork Recommended Setting

	Inner chamber	Balance chamber
		psi (kPa, kgf/cm <sup>2</sup> )
soft	167 (1,150, 11.7)	156 (1,075, 11.0)
standard	174 (1,200, 12.2)	163 (1,125, 11.5)
medium - stiff	181 (1,250, 12.7)	170 (1,175, 12.0)
stiff	189 (1,300, 13.3)	178 (1,225, 12.5)

When adjusting the left fork air pressures to the recommended air pressures, adjust the left fork outer tube oil capacity to the standard value, and adjust the rebound and compression damping adjuster to the standard settings.