

# Clutch System


Refer to *Important Safety Precautions* on [page 23](#).

## Clutch Lever Adjustment

The distance between the tip of the clutch lever and the grip may be adjusted.

Make sure to adjust the clutch lever freeplay after the clutch lever position is adjusted or clutch cable is disconnected.


1. Loosen the lock nut (1).
2. To position the clutch lever farther away from the handgrip, turn the adjuster (2) counterclockwise. To position the clutch lever closer to the handgrip, turn the adjuster clockwise.
3. Tighten the lock nut.

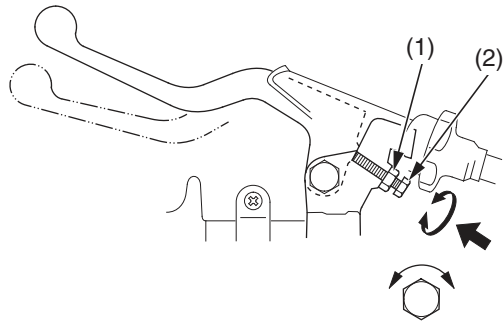

(1) lock nut


(2) adjuster

4. Turn the cable end adjuster (3) in direction (+) until it seats lightly and then turn it out two turns.

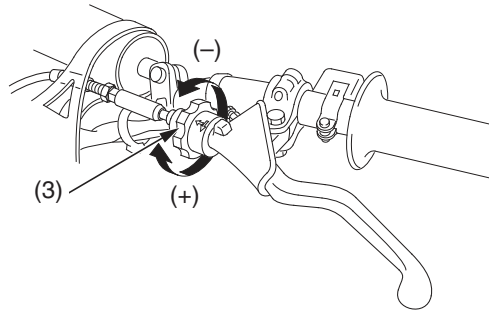

(3) cable end adjuster  
(+) increase freeplay  
(-) decrease freeplay

5. Loosen the lock nut (4) and turn the integral cable adjuster (5) to adjust the clutch lever freeplay at the tip of lever. Freeplay: 3/8 – 13/16 in (10 – 20 mm). Tighten the lock nut.

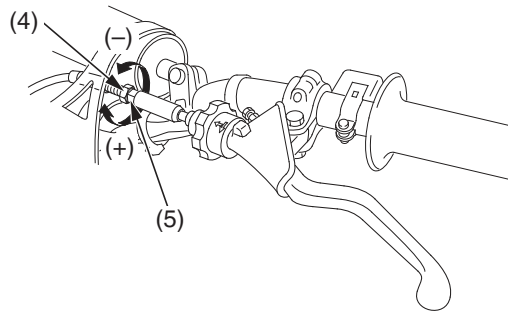

(4) lock nut  
(5) integral cable adjuster  
(+) increase freeplay  
(-) decrease freeplay

6. Adjust the cable end adjuster for minor adjustment ([page 63](#)).


## Clutch Lever Freeplay

### Inspection

Check freeplay (1).

Freeplay: 3/8 – 13/16 in (10 – 20 mm)

If necessary, adjust to the specified range.

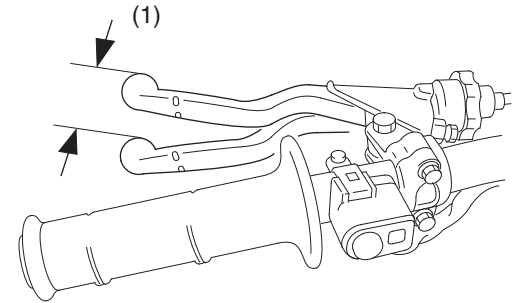

(1) freeplay

Improper freeplay adjustment can cause premature clutch wear.

Make sure to adjust the clutch lever freeplay after the clutch cable is disconnected.