 


- 6 Press the **SET** button. The clock is set, and then the display moves to the changing of the speed and mileage unit.
 - ▶ The adjustment can also be set by turning the ignition switch to the **○** (Off) position.

If no buttons were pressed for about 30 seconds, the display will stop flashing automatically and the adjustment will be cancelled.

2 Changing the speed and mileage unit:

- 1 Press the **SEL** button to select either "km/h" & "km" or "mph" & "mile" for the speedometer, odometer and tripmeters.



- 2 Press the **SET** button. The speed and mileage unit is set, and then the display will return to the ordinary display.