

Parts Location

Spark arrester ➡ P.61

Air cleaner ➡ P.67

Throttle grip ➡ P.83

Front brake fluid reservoir ➡ P.70

Right side cover ➡ P.56

Coolant reserve tank ➡ P.68

Engine oil fill cap ➡ P.63

Engine oil filter ➡ P.65

Engine oil level inspection window ➡ P.63

Engine oil drain bolt ➡ P.65

Rear brake fluid reservoir ➡ P.70