≣○ High beam indicator 上 High coolant temperature indicator Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the \bigcirc (Run) position. If it comes on while running: P.88 - Ci 📩 😤 N 🐵 78910 Left turn signal indicator Right turn signal indicator

(B) ABS (Anti-lock Brake System) indicator CRF250RLA

Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h). If it comes on while riding: P.89