

## Side Cover

### Removal

1. **Left** Open the tool box. ► P. 34
2. Remove the bolts.
3. Remove the prongs from the grommets.
4. Remove the side cover.

### Installation

Install the parts in the reverse order of removal.

