

Troubleshooting

Engine Will Not Start	P. 87
Overheating (High coolant temperature indicator is on)	P. 88
Warning Indicators On or Flashing	P. 89
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 89
ABS (Anti-lock Brake System) Indicator	P. 89
Other Warning Indications	P. 90
Fuel Gauge Failure Indication	P. 90
Tire Puncture	P. 91
Electrical Trouble	P. 97
Battery Goes Dead	P. 97
Burned-out Light Bulb.....	P. 97
Blown Fuse.....	P. 101

Unstable Engine Operation Occurs Intermittently	P. 105
--	--------