

- **5.** Turn the socket counterclockwise, and remove it.
- **6.** Slightly press the bulb and turn it counterclockwise.
- **7.** Install a new bulb and parts in the reverse order of removal.

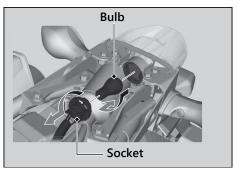

| Front/Rear Turn Signal Bulb

- 1. Remove the screw.
- 2. Remove the turn signal lens.
- **3.** Slightly press the bulb and turn it counterclockwise.

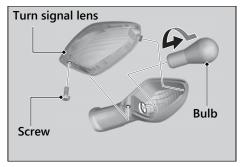

4. Install a new bulb and parts in the reverse order of removal