Servicing Your Honda

Keeping your CRF well maintained is absolutely essential to your safety. It's also a good way to protect your investment, get maximum performance, avoid breakdowns, and have more fun.

To help keep your CRF in good shape, this section includes a Maintenance Schedule for required servicing and step-by-step instructions for specific maintenance tasks. You'll also find important safety precautions, information on oils, and tips for keeping your CRF looking good.

An ECM system is used on this motorcycle; consequently, routine ignition timing adjustment is unnecessary. If you want to check the ignition timing, refer to an official Honda Service Manual (page 182).

For information about the exhaust emission and noise emission requirements of the U.S. Environmental Protection Agency (EPA) and the California Air Resouses Board (CARB), see page 173.

Maintenance, replacement or repair of the emission control devices and systems may be performed by any motorcycle repair establishment or individual using parts that are "certified" to EPA standards.

An optional tool kit may be available. Check with your dealer's parts department.

Before You Service Your Honda	
The Importance of Maintenance	30
Maintenance Safety	31
Important Safety Precautions	31
Maintenance Schedule	
General Competition Maintenance	36
Before & After Competition Maintenance	
Between Motos & Practice Maintenance	40
After Competition Maintenance	
Committee December 2	
Service Preparations	40
Maintenance Component Locations	42
Seat	
Side Cover	
Fuel Tank	
Subframe	49
Service Procedures	
Fluids & Filters	
Fuel System	54
Fuel System	
Engine Oil	63
Engine Oil	63 66
Engine Oil	63 66 69
Engine Oil	63 66 69
Engine Oil Coolant Air Cleaner Crankcase Breather	63 66 69
Engine Oil Coolant Air Cleaner Crankcase Breather Engine	63 66 69
Engine Oil Coolant Air Cleaner Crankcase Breather Engine Throttle	63 66 69 71
Engine Oil Coolant Air Cleaner Crankcase Breather Engine Throttle Engine Idle Speed	63 66 69 71 72
Engine Oil Coolant Air Cleaner Crankcase Breather Engine Throttle Engine Idle Speed Clutch System	63 66 71 72 74
Engine Oil Coolant Air Cleaner Crankcase Breather Engine Throttle Engine Idle Speed Clutch System Spark Plug	63 66 69 71 72 74 75
Engine Oil Coolant Air Cleaner Crankcase Breather Engine Throttle Engine Idle Speed Clutch System	63 66 69 71 72 75 80

Chassis	
Suspension	99
Front Suspension Inspection	99
Rear Suspension Inspection	115
Brakes	116
Wheels	
Tires & Tubes	121
Side Stand	
Drive Chain	124
Exhaust Pipe/Muffler	127
Spark Arrester	
Additional Maintenance Procedures	
Electrical	
Battery	133
Headlight & Taillight	135
Appearance Care	136