

Maintenance Schedule

FREQUENCY			ODOMETER READING (Note 1)							Refer to page
			× 1,000 mi	4	8	12	16	20	24	
ITEM	NOTE	× 1,000 km	6.4	12.8	19.2	25.6	32.0	38.4		
EMISSIONS-RELATED ITEMS	*	FUEL LINE			I		I		I	–
	*	THROTTLE OPERATION			I		I		I	–
	*	AIR CLEANER	2			R			R	–
		CRANKCASE BREATHER	3		C	C	C	C	C	153
		SPARK PLUGS			EVERY 16,000 mi (25,600 km) R					158
	*	VALVE CLEARANCE	4		EVERY 32,000 mi (51,200 km) I					–
		ENGINE OIL	6		R		R		R	143
		ENGINE OIL FILTER			R		R		R	147
	*	ENGINE IDLE SPEED			I		I		I	–
		RADIATOR COOLANT	5			I		I		R 150
	*	COOLING SYSTEM				I		I		I –
	*	SECONDARY AIR SUPPLY SYSTEM				I		I		I –
*	EVAPORATIVE EMISSION CONTROL SYSTEM					I			I –	

* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 234).